

One Year Limited Warranty

HoMedics, Inc., guarantees this product free from defects in material and workmanship for a period of one year from the date of purchase, except as noted below.

This HoMedics product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of HoMedics. HoMedics shall not be responsible for any type of incidental, consequential or special damages. All implied warranties, including but not limited to those implied warranties of fitness and merchantability, are limited in the total duration of one year from the original purchase date.

To obtain warranty service on your HoMedics EnviraScape, either hand deliver or mail the unit and your dated sales receipt (as proof of purchase), postpaid, along with a check or money order in the amount of \$5.00 payable to HoMedics, Inc. to cover handling.

Upon receipt, HoMedics will repair or replace, as appropriate, your EnviraScape and return it to you, postpaid. Warranty is solely through HoMedics Service Center. Service of this product by anyone other than HoMedics Service Center voids warranty.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.

MAIL TO:
HOMEDICS
SERVICE CENTER
3000 PONTIAC TRAIL
COMMERCE TOWNSHIP,
MI 48390

Email:
CSERVICE@HOMEDICS.COM

©1999 HoMedics, Inc. or its affiliated companies, all rights reserved.
HoMedics® is a registered trademark of HoMedics Inc. or its affiliated companies.
EnviraScape™ is a trademark of HoMedics Inc. or its affiliated companies.
Z990308
IB-WFROCK-C

TABLETOP RELAXATION FOUNTAIN

ENVIRASCAPE[®] ROCK GARDEN



**Instruction Manual and
Warranty Information**

WF-ROCK

1 year
limited warranty

The sounds of nature soothe human nature

Thank you for purchasing EnviraScape, Homedics' tabletop relaxation fountain. This, like the entire Homedics product line, is built with high-quality craftsmanship to provide you years of dependable service. We hope that you will find it to be the finest product of its kind.

EnviraScape enables you to create an all-encompassing environment with sound. The sound of flowing water enhances your environment by releasing negative ions, and promoting relaxation. Only EnviraScape offers you the luxury of these vital benefits with its creative design which adds beauty to any indoor environment.

EnviraScape Features

Innovative, Artistic Design

Enhances the environment at home or at work.

4 Water-flow Speeds

Select the pace that meets your mood.

Durable Electrical Water Pump

Can be operated from any indoor electrical outlet.

Easy to Assemble

Assembles in minutes with simple, illustrated instructions.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- The pump is supplied with a grounding conductor and a grounding type attachment plug. To reduce the risk of electric shock, connect only to a properly grounded outlet (See pg. 8).
- Do not remove the grounding pin from the plug.
- Do not connect to any voltage other than that shown on the pump.
- Do not pump flammable liquids.
- Do not use water above 90°.

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by HoMedics; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord, plug, pump, cable or housing. If it is not working properly, if it has been dropped or damaged, return it to Homedics Service Center for examination and repair.
- Keep cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury to persons.
- Do not carry this appliance by supply cord or use cord as handle.
- To disconnect, remove plug from outlet.
- This appliance is designed for indoor use only. Do not use outdoors.

SAVE THESE INSTRUCTIONS

Caution – Please read all instructions carefully before operating.

- If you have any concerns regarding your health consult your doctor before using this product.
- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Connect the pump with the proper voltage as indicated on the pump label.

Caution – Continued

- Always keep the cord away from high temperature and fire.
- Unplug the pump from power source before cleaning, maintenance or disassembling.
- To get the best flowing effect, product must be placed on a flat surface.
- Never let pump run dry, as this will shorten life of the pump.
- Do not lift, carry, hang, or pull the pump by the power cord.
- Operate with freshwater only.
- Operate pump completely submerged for proper cooling.
- The electrical cord of the EnviraScape Rock Garden cannot be replaced. If it sustains damage, you must stop using the EnviraScape Rock Garden immediately and return it to the Homedics Service Center for repair. (See the warranty section for Homedics address.)
- Disconnect the appliance from supply mains before putting hands into water.

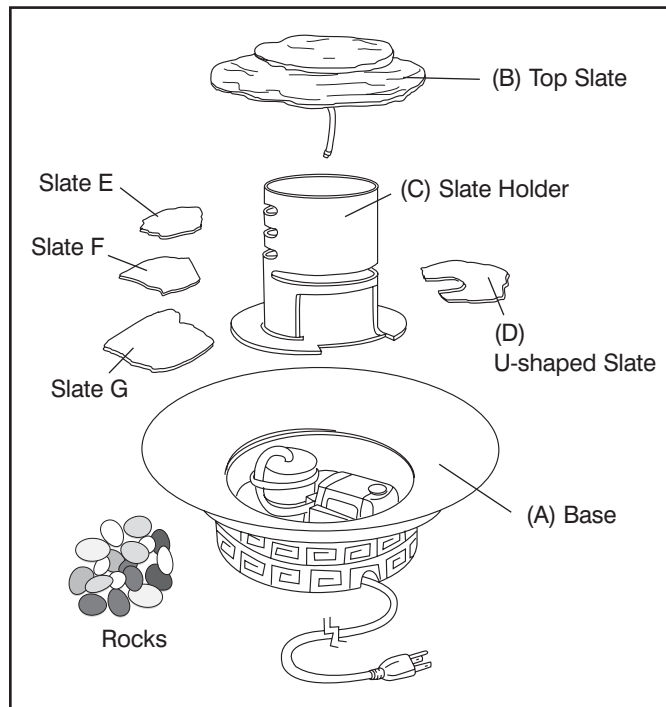


Figure 2

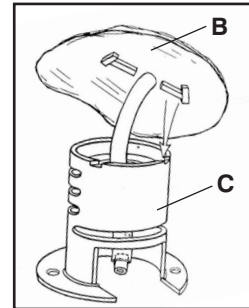


Figure 3

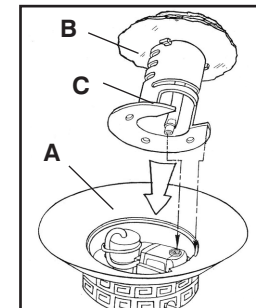


Figure 4

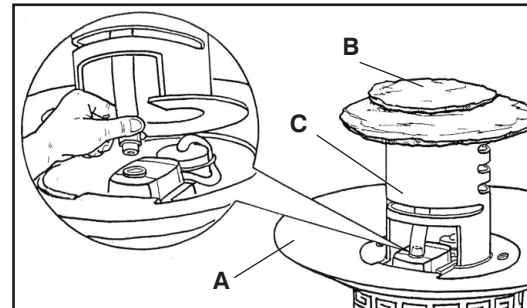


Figure 5


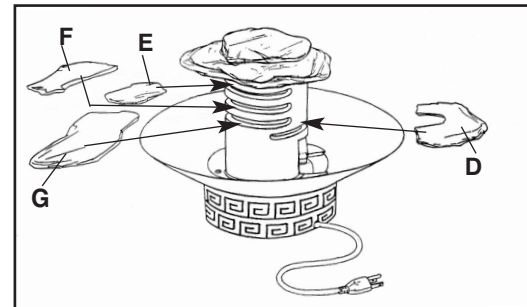


Figure 6

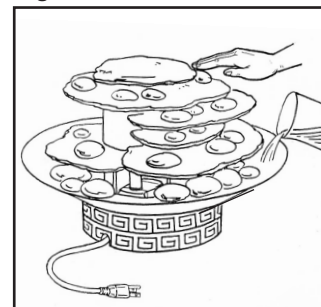

Assembly and Instructions for Use

1. Unpack the product. Wipe off dust with a damp cloth.
2. Lead the cord through the cord slot on the bottom of the Base (A). This will ensure that the unit is balanced when placed on a flat surface. See Figure 2.
3. Take the tube on the bottom side of the Top Slate (B) and place it through the Slate Holder (C). Place this all the way so that you can see the tube through the cut out on the back of the Slate Holder (C). See Figure 2.
4. Place the Slate Holder (C) with the Top Slate attached (B) evenly across the Base (A). Connect the tube to the pump. See Figures 3 and 4.
5. Insert the Slate (D) into the "U" shaped slot (lowest) on the back of the Slate Holder (C), to cover the pump. Insert Slates (E, F, G) into the Slate Holder as illustrated in the diagram. See Figure 5. NOTE: This is the slate positioning that we recommend. The slates are interchangeable and will fit into any of the slots on the Slate Holder. The slates can be arranged differently - by pulling the slates in or out - the fountain will produce different water patterns and sounds.
6. Arrange the stones provided onto the base and slates. See Figure 6.
7. Look through the opening on the back of the slate holder and fill the entire bottom of the base, up to the bottom Slate Holder, with clean water. Water should be visible through the back cut-out in the slate holder but should not be rising above the bottom of the Slate Holder.
8. Plug pump in 120V household outlet.

Maintenance

- **To clean the pump:**

Unplug from electrical outlet. Remove it from the base of the fountain. Use a small brush or stream of water to remove any debris.

- **To keep water clean:**

Periodically change water and clean the product according to the water condition. Keeping the water clean prevents the water from becoming sticky and forming micro-organisms.

- **To clean off hard water deposits on the base or rocks:**

Soak the container and rocks in a mixture of vinegar and water to clean and remove any mineral build-up.


- **Keeping the water at an optimum level:**

Add water periodically to keep water level at an optimum level to avoid shortening the life of the pump.

NOTE: Never let the pump run dry, as this will shorten the life of the pump.

- **Fountain Storage**

Unplug the fountain from the electrical outlet, empty the water, and store rocks and fountain in a dry, cool place.

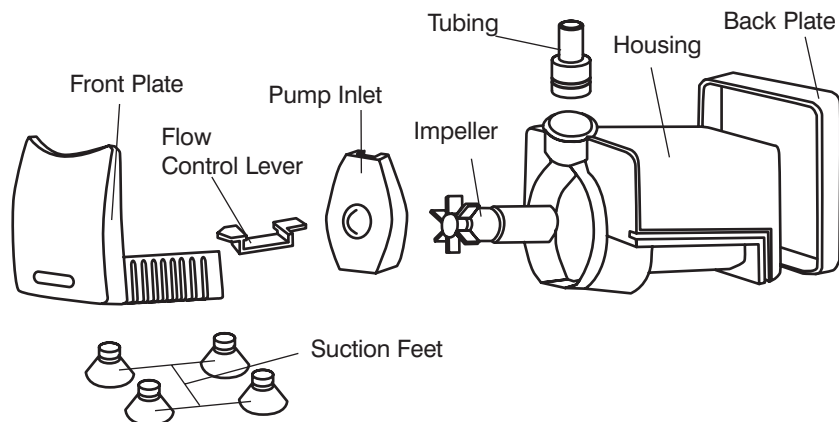

Caution:

All servicing of this fountain must be performed by authorized HoMedics service personnel only.

Attention:

In order to get best results, please operate pump completely submerged. Keep the water level above the minimum water level ALL THE TIME.

Troubleshooting

- **If the pump fails to operate, check the following:**

Check the circuit breaker, or try a different outlet to make sure the pump is getting electrical power. **NOTE:** Always disconnect from electrical outlet before handling the pump.

Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.

Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.

Monthly maintenance will add to your pump's life.

NOTE: Ensure that the electrical cord loops below the electrical outlet to form a 'Drip Loop'. This will prevent water from running down the cord into the electrical outlet.

- **If the pump gurgles, spews, or "burps":**

Check the water level to make sure the pump has enough water to function.


- **Obtaining a desired water level:**

Check the water level daily the first week to measure the rate of evaporation; refill with water as needed.

- **If water is splashing outside the fountain:**

Rocks that are hit by water and also touch the edge of the base will cause water to splash outside of the base and contribute to the splash factor. Expect some splash to occur as you get the rocks organized.

If splash continues, adjust the flow control valve to a lower setting, and/or rearrange the river rocks by moving them away from the edge of the base.

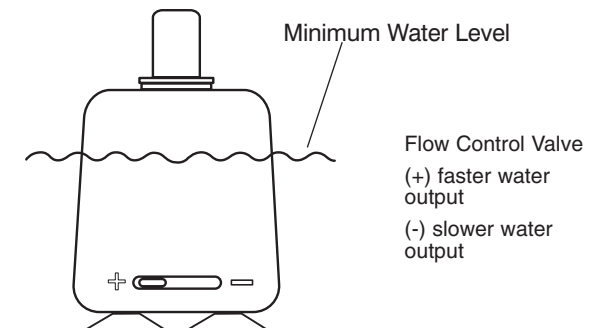

Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

1. This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in **Figure A**. A temporary adapter that looks like the adapter illustrated in **Figure B** and **Figure C** may be used to connect this plug to a 2-pole receptacle as shown in **Figure B** if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (**Figure A**) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.
2. This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in **Figure A**. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

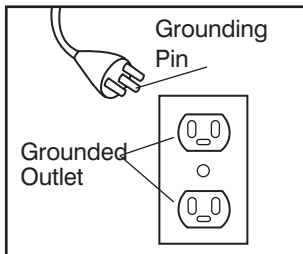



Figure A

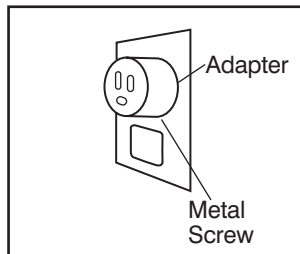


Figure B

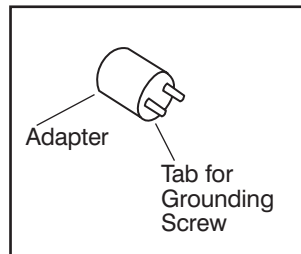


Figure C